


GB

IE

MT

# DETAILED INSTRUCTIONS FOR USE OF COMBINED STEAM AND MICROWAVE OVEN

**gorenje**

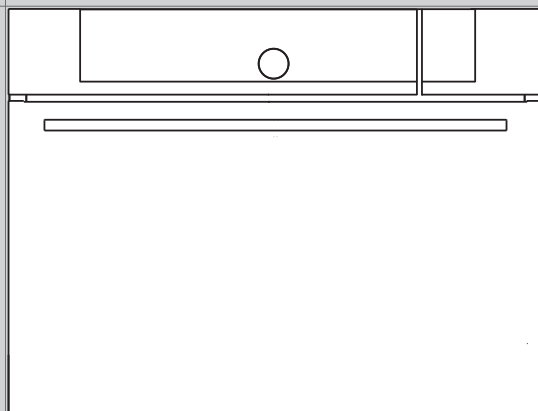

We thank you for your trust in purchasing our appliance.

This detailed instruction manual is supplied to allow you to learn about your new appliance as quickly as possible.

Make sure you have received an undamaged appliance.

Should you notice any transport damage, please notify your dealer or regional warehouse where your appliance was supplied from.

The telephone number can be found on the invoice or on the delivery note.

Instructions for installation and connection are supplied on a separate sheet.

Instructions for use are also available at our website:

[www.gorenje.com](http://www.gorenje.com) / < <http://www.gorenje.com> />



Important information



Tip, note

# CONTENTS

<b>4 IMPORTANT SAFETY INSTRUCTIONS</b> 9 Before connecting the appliance	<b>WARNINGS</b>
<b>10 COMBINED STEAM OVEN AND MICROWAVE OVEN</b> 14 Control unit 16 Information on the appliance - data plate (depending on the model)	<b>INTRODUCTION</b>
<b>17 BEFORE THE FIRST USE</b> 17 Steam cooking 18 Filling the water tank 19 Microwave function ..... <b>20 FIRST USE</b> 21 Testing water hardness	<b>INITIAL PREPARATION OF THE APPLIANCE</b>
<b>22 SELECTING THE MAIN MENUS FOR BAKING AND SETTINGS</b> 23 A) Baking by selecting the type of food (auto; automatic mode) 25 B) Baking by selecting the mode of operation (professional mode and steam mode) 33 C) Storing your own programme (my mode) 34 D) Steam cooking (Steam – quick access to steam programs) 37 E) Cooking with microwaves ..... <b>38 START THE COOKING PROCESS</b> ..... <b>38 END OF COOKING AND SWITCHING OFF THE OVEN</b> ..... <b>39 SELECTING ADDITIONAL FEATURES</b> ..... <b>41 SELECTING GENERAL SETTINGS</b> ..... <b>43 DESCRIPTIONS OF SYSTEMS (COOKING MODES) AND COOKING TABLES</b>	<b>SETTINGS AND BAKING</b>
<b>67 MAINTENANCE &amp; CLEANING</b> 68 Conventional oven cleaning 69 Steam cleaning program (steam clean) 70 Cleaning the steam system 71 Cleaning the filter foam 72 Removing and cleaning the wire guides 73 Replacing the bulb	<b>CLEANING AND MAINTENANCE</b>
<b>74 TROUBLESHOOTING TABLE</b> ..... <b>75 DISPOSAL</b>	<b>PROBLEM SOLVING</b>

# IMPORTANT SAFETY INSTRUCTIONS

---



**CAREFULLY READ THE INSTRUCTIONS AND SAVE THEM FOR FUTURE REFERENCE.**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

**WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

**WARNING:** Accessible parts may become hot during use. Young children should be kept away.

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

Only use the temperature probe recommended for use in this oven.

**WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass/ the glass of hinged lids of the hob (as appropriate), since they can scratch the surface, which may result in shattering of the glass.

Do not use steam cleaners or high pressure cleaners to clean the appliance as this may result in an electric shock.

The appliance is not intended to be controlled with external timers or special control systems.

Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance must not be installed behind a decorative door in order to avoid overheating.

The appliance is intended for household use. Do not use it for any other purpose, such as room heating, drying of pets or other animals, paper, fabrics, herbs etc. As this may lead to injury or fire hazard.

The appliance may only be connected to the power mains by an authorized service technician or expert. Tampering with the appliance or nonprofessional repair thereof may result in risk of severe injury or damage to the product.

If the power cords of other appliances located near this appliance are caught in the oven door, they may be damaged, which may in turn result in a short circuit. Therefore, keep the power cords of other appliances at a safe distance.

Do not line the oven walls with aluminium foil and do not place baking trays or other cookware on the oven bottom. Aluminium foil would prevent air circulation in the oven, hinder the cooking process, and ruin the enamel coating.

Oven door become very hot during operation. A third glass is installed for extra protection, reducing the temperature of the outside surface (only with some models).

Oven door hinges may be damaged when under excessive load. Do not place heavy pans on open oven door and do not lean against open oven door when cleaning the oven cavity. Never stand on the open oven door and do not let children to sit on it.

Appliance operation is safe with and without tray guides.

Make sure the vents are never covered or obstructed in any other way.

## Safe and correct use of the steam oven

Leave the appliance at room temperature for some time before connecting it to the power mains to allow all components to adapt to room temperature. If the oven is stored at a temperature near or below freezing point, there is a danger for some components, especially the pumps.

The appliance should not operate in an environment with a temperature below 5 °C. Below this temperature, the appliance may not operate correctly. If the appliance is switched on in such conditions, the pump could be damaged.

If the appliance does not work correctly, disconnect it from the power mains.

Do not store items in the oven, which could cause danger when the oven is switched on.

Do not use distilled water that is not suitable for ingestion (e.g. distilled water for batteries, to which acid is added).

After the steam cooking is completed, there is some residual steam in the oven. Open the oven door carefully, as there is danger of scalding with steam. Clean the oven once it has cooled down to room temperature.

After the cooking process, the remaining water in the steam system is pumped back into the water tank. Therefore, the water there could be hot. Be careful when emptying the water tank.

To prevent the build-up of limescale, leave the oven door open after cooking to allow the oven cavity to cool down to room temperature.

It is inadvisable to open the door during the steam cycle, as this will increase power consumption and formation of water condensate.

## **Safe use of the microwave oven**

WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.

Only use utensils suitable for use in microwave ovens.

Metallic containers for food and beverages are not allowed during microwave cooking.

When heating food in plastic or paper containers, keep an eye on the oven as such packaging may ignite.

Microwave heating of beverages can result in delayed eruptive boiling; therefore, care must be taken when handling the container. To prevent eruptive boiling, place a non-metal object (e.g. a wooden, glass or plastic spoon) into the container before you start heating up beverage.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

The oven should be cleaned regularly and any food deposits removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

The appliance must be operated with any cabinet door open.



Heed the minimum distance between the upper edge of the oven and the nearest object above it.

The microwave oven is intended for heating food and beverages. Drying food or clothing and heating of hot packs or pads, slippers, sponges, moist cloths etc. may result in injury, ignition, or fire.

Always use oven mitts to remove dishes from the oven. Some pots, pans, or trays absorb the heat of foods and therefore become very hot.

Make sure to only use the cookware that is suitable for use in a microwave oven. Do not use cookware made of steel or cookware with golden or silver rims.

Do not leave any accessories or utensils in your oven when it is off. To avoid damage, do not switch on an empty oven.

Do not use receptacles made of porcelain, ceramics, or clay, if there are pores in the material or if the inside is not glazed. Once heated up, the moisture that would penetrate these pores could cause cracking. Only use the cookware intended for use in a microwave oven.

Always read and observe the instructions for heating in a microwave oven, specified on the food packaging.

Be careful when heating alcohol-containing food, as a combustible mixture of alcohol and air may form inside the oven. Open the door carefully.

When using the microwave or the combined microwave and convection functions, use of metallic cookware, forks, spoons, knives or metal clips/fasteners for frozen food is not recommended. After heating, stir the food or leave it to rest until the heat is evenly distributed.

## BEFORE CONNECTING THE APPLIANCE




Carefully read the instructions for use before connecting the appliance. Repair or any warranty claim resulting from incorrect connection or use of the appliance shall not be covered by the warranty.

# COMBINED STEAM OVEN AND MICROWAVE OVEN

## (DESCRIPTION OF THE OVEN AND EQUIPMENT - DEPENDING ON THE MODEL)

The figure represents one of the built-in appliance models. Since the appliances for which these instructions were drawn up may have different equipment, some functions or equipment may be described in the manual that may not be present in your appliances.

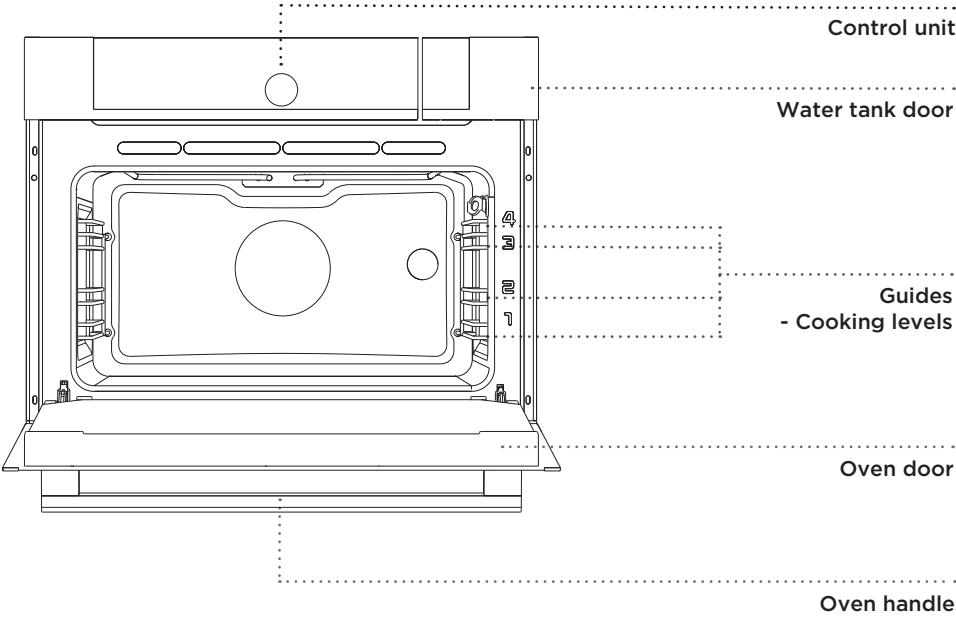

## WIRE GUIDES

The wire guides allow preparation of the food on 4 levels (please note that the levels/guides are counted from the bottom up).

Guides 3 and 4 are intended for grilling, and guide 1 is used with microwave systems when food is prepared in a glass baking dish.

## OVEN DOOR SWITCH

The switches deactivate oven heating, the fan, and the microwaves when the oven door is opened during the cooking process. When the door is closed, the switches turn the heaters and the microwaves back on.

 
## COOLING FAN

The appliance is fitted with a cooling fan that cools the housing and the appliance control panel.

## EXTENDED OPERATION OF THE COOLING FAN

After the oven is switched off, the cooling fan continues to operate for a short while in order to cool the oven. (Extended cooling fan operation depends on the temperature in the center of the oven).

## OVEN EQUIPMENT AND ACCESSORIES (depending on the model)



**GLASS BAKING DISH** is used for cooking with all oven systems and for cooking with microwaves. It can also be used as a serving tray.




**Do not use the grid, deep baking tray, steam set or any other metal parts with systems that include microwave operation!**



 
The **GRID** is used for grilling or as support for a pan, baking tray or baking dish with the food.



There is a safety latch on the grid. Therefore, lift the grid slightly at the front when pulling it out from the oven.



 The **SHALLOW BAKING SHEET** is used for baking pastry and cakes.




The **DEEP BAKING TRAY** is used for roasting meat and baking moist pastry. It can also be used as a drip tray.





Never place the deep baking tray in the first guide during the cooking process, except when grilling and you are only using the deep tray as a drip tray.




**As baking accessories heat up, their form may change. This does not affect their functionality and their original form will be restored when they cool down.**

 

 **STEAM SET (INOX)** is used for steam cooking. Place the perforated tray in the middle level and the drip tray one level below.

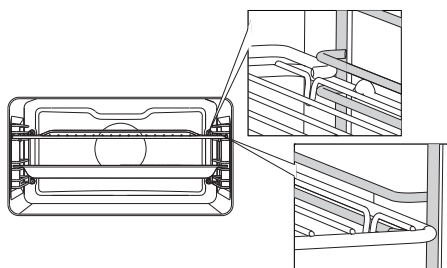

The grid or the tray should always be inserted into the groove between the two wire profiles.

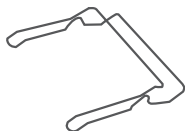

**BAKING TRAY HOLDER** makes it easier to remove hot baking trays from the oven after baking.

**DESCALING AGENT** or steam system cleaning.

**TEST PAPER STRIP** for testing water hardness.



The appliance and some of the accessible parts tend to heat up during cooking. Use oven mitts.

# CONTROL UNIT

(depending on the model)



**1** ON/OFF KEY

**2** OVEN  
LIGHTING ON/  
OFF KEY

**3** BACK KEY

**Touch briefly to**  
return to previous  
menu.

**Touch and hold to**  
return to main menu.

**4** Selection and  
CONFIRMATION  
KNOB

**Select the setting** by  
rotating the knob.

**Confirm your**  
**selection** by pressing  
the knob.



**5** MINUTE  
MINDER/  
ALARM

**6** CHILD LOCK  
KEY

**7** START/STOP  
KEY

**8** DISPLAY - displays  
all settings


**Long touch:** START

**Long touch during  
operation:** STOP

**NOTE:**

The keys will respond better if you touch them with a larger area of your fingertip. Each time you touch a key, this will be acknowledged by a short acoustic signal.

# INFORMATION ON THE APPLIANCE - DATA PLATE (DEPENDING ON THE MODEL)

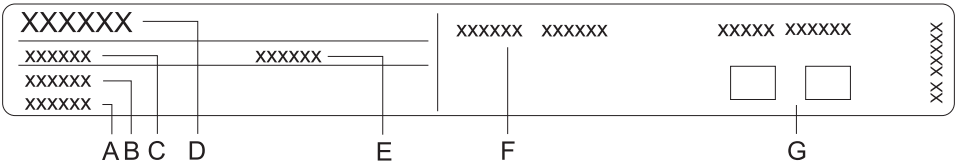

- A Serial number
- B Code
- C Type
- D Brand
- E Model
- F Technical data
- G Compliance symbols

The rating plate indicating the basic information about the appliance is located at the edge of the oven and it is visible when the oven door is opened.



# BEFORE THE FIRST USE

---

**Before the first use,** remove all components, including any transport equipment, from the oven. Clean all accessories and utensils with warm water and regular detergent. Do not use any abrasive cleaners.

**Before using the oven the first time, heat** it without any food, in the system “upper and bottom heater”, at the temperature of 200 °C for approximately one hour. The characteristic smell of a “new appliance” will be emitted. Ventilate the room thoroughly during the first use.

## STEAM COOKING

Healthy and natural, steam cooking preserves the full flavour of foods. This cooking method releases no odours.

### **Following are the advantages of steam cooking:**

Cooking (braising, roasting) starts before the temperature inside the oven reaches 100 °C. Slow cooking (braising, roasting) is also possible at lower temperatures.

It is healthy: vitamins and minerals are well preserved because only a small share of them is dissolved in the condensation water that touches the food.

There is no need to add any fat during the cooking process. The steam maintains the taste of food. It does not add odours, nor the taste of the grill or the pan. Furthermore, it takes nothing away because the food is not diluted in the water.

Steam does not spread the flavour or smell; therefore, meat or fish can be cooked together with vegetables.

Steam is also suitable for blanching, defrosting and reheating or keeping the food warm.


# FILLING THE WATER TANK

The WATER TANK allows for independent water supply to the steam oven. The tank volume amounts to approx. 1.3 litres (maximum water level – see marking). This amount of water suffices for approximately 3 hours of cooking time with the longest steam cycle (hot air with steam on "high" system).

 Clean the water tank before the first use.




**Always fill the water tank with clean and cool water from the pipeline, bottled water without additives, or distilled water suitable for use in cooking. Water poured into the water tank should be at a temperature of 20 °C (+/- 10 °C).**

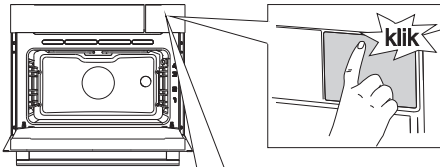


**1** Press (on the spot with the sticker) to open the tank door.


 The sticker can be removed later.

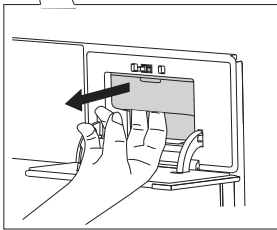


**2** Remove the water tank from the housing by pulling by the recessed part.

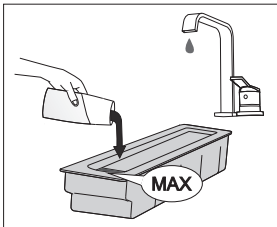

**3** Open the lid. Wash the tank with water. Re-assemble the tank. Before use, add fresh water up to the MAX marking on the tank.

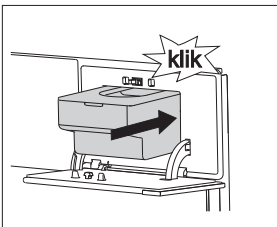


**4** Push the water tank back into the housing to the final position (until you hear a short click). Then, press the tank door to close it.

 After the cooking process, the remaining water in the steam system is pumped back into the water tank. The lid and the water tank can be washed with standard non-abrasive liquid cleaners or in a dishwasher.

# MICROWAVE FUNCTION




Microwaves are used for cooking, roasting and defrosting food. They allow quick and efficient cooking without changing the colour or shape of the food.

Microwaves are a type of electromagnetic radiation. Such radiation is commonly found in our environment in the form of radio-electric waves, light or infrared rays. Their frequency is in the 2,450 MHz range.

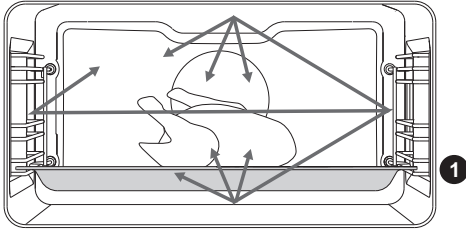

Their behaviour:

- They are reflected by metals.
- They travel through all other materials.
- They are absorbed by water, fat and sugar molecules.

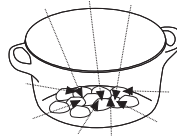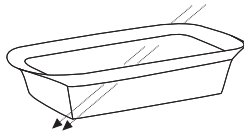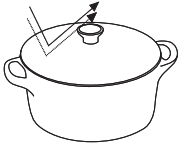

When food is exposed to microwaves, the molecules begin to move rapidly, thereby generating heat.

The microwaves penetrate approximately 2.5 centimeters deep into the food. If the food is thicker, the core of the food will be cooked by conduction, as in conventional cooking.




**Never use or activate a microwave system if the oven is empty.**

# FIRST USE

## LANGUAGE SELECTION


Upon the first connection of the appliance to the power supply or after a prolonged period of being disconnected, please set the desired language. The default language is English.

 Confirm each setting by pressing the KNOB.




Turn the KNOB and select the desired language. Confirm your selection.

## SETTING THE DATE

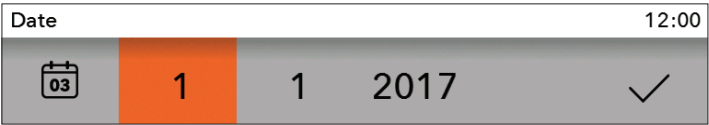


By pressing the KNOB set the DAY, MONTH and YEAR. Turn the knob and confirm your selection with a check mark.

## SETTING THE CLOCK

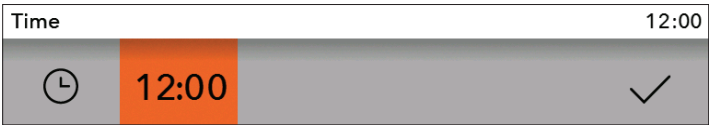

Turn the KNOB and set the CLOCK. Confirm your selection with a check mark.

 The oven also operates if you do not set the time of day, but in this case it is not possible to set the timer features (see chapter SELECTING TIMER FEATURES).

After a few minutes of inactivity, the appliance goes into Standby mode.

## CHANGING CLOCK SETTINGS

You can change the time of day when no timer function is activated (see chapter SELECTING GENERAL SETTINGS).


# TESTING WATER HARDNESS

Water hardness test should be carried out before first use.

A strip will appear on the display with the sign **"Very hard water"**.



Maximum water hardness is set as a factory default.

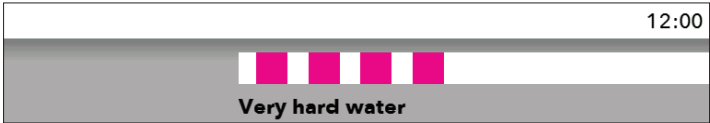

	4 green stripes	Very soft water
	1 red stripe	Soft water
	2 red stripes	Medium hard water
	3 red stripes	Hard water
	4 red stripes	Very hard water

Soak the test paper strip (supplied with the appliance) in water for one (1) second. Wait one minute and observe the number of stripes on the paper. Enter the information on the number of stripes into the appliance. Rotate the KNOB and confirm.


## CHANGING THE WATER HARDNESS SETTING

Water hardness can also be set in the menu CHOOSING THE GENERAL SETTINGS.



Incorrect water hardness level setting could affect appliance operation and useful life.

# SELECTING THE MAIN MENUS FOR BAKING AND SETTINGS

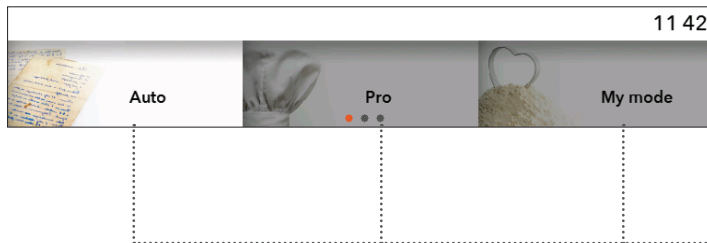

Turn the KNOB and select the name of the menu. Confirm the selection by pressing the KNOB. The NAME of the selected menu appears above.



Confirm each setting by pressing the KNOB.

## A) Auto

In this mode, first select the type of dish and then the selected food with automatic setting of the quantity, level of doneness and end of operation.

The programme offers a variety of pre-set recipes, tested by chefs and nutrition experts.

## B) Pro

This mode offers a selection of dishes with factory pre-set values, which you can modify.

## C) My mode

This mode allows you to prepare dishes according to your wishes, each time using the same steps and settings. You can save your settings in the oven's memory and recall them the next time you want to use them.


## D) Steam


This is a natural way of cooking that retains a full flavour of the food.

## E) Microwaves


This mode is suitable for cooking, roasting, and defrosting of food.

# A) BAKING BY SELECTING THE TYPE OF FOOD (auto; automatic mode)


 Confirm each setting by pressing the KNOB.

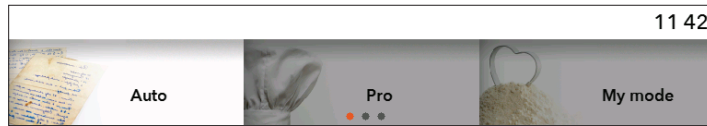

Turn the KNOB and select the **Auto**. Confirm your selection by pressing the KNOB.

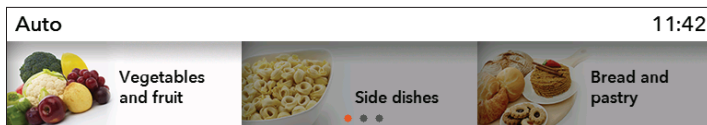

Select the type of dish and the selected food. Confirm your selection.

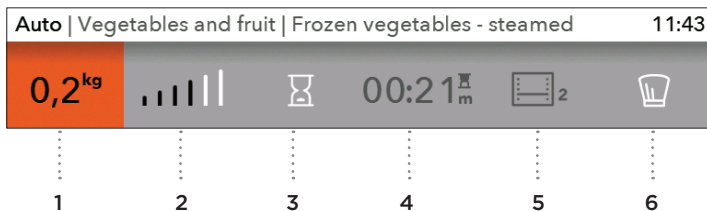


The pre-set values are shown. You can change the quantity, level of doneness and delayed start (end of baking).

- 1 quantity
- 2 level of doneness
- 3 delayed start
- 4 duration of baking
- 5 baking system and recommended level
- 6 professional (Pro) mode

 If in the **Automatic** mode the symbol  is selected, the programme switches to **Professional (Pro) mode** (see chapter BAKING BY SELECTING THE MODE).

Touch the **START/STOP** key to start the baking process.  
The display shows all the selected settings.

## PREHEATING

Cooking procedures for some dishes in the **Auto** mode also include the preheat function . When you select the food, the following notification will appear: **"Selected program includes preheat function."** (Confirm your selection with the KNOB.) **"Preheating started."** Do not insert the food yet. Actual and set temperature will alternate on the display.


When the selected temperature is reached, the preheating process stops and an acoustic signal is emitted. The following notification will appear on the display: **"Preheating complete."** Open the door and insert the food. The program then resumes the cooking process with selected settings.




When the preheat function is set, delayed start function cannot be used.




## B) BAKING BY SELECTING THE MODE OF OPERATION (professional mode and steam mode)

 Confirm each setting by pressing the KNOB.

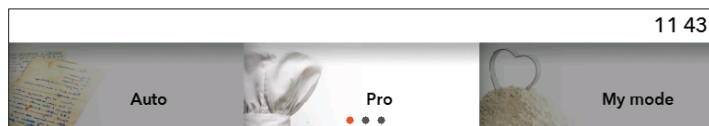

Turn the KNOB and select **Pro**. Confirm your selection.

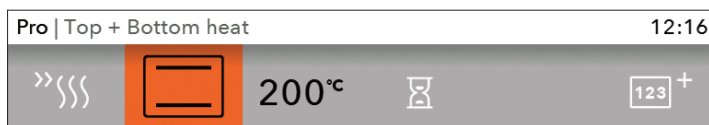

Select your own basic settings.


### BASIC SETTINGS

- 1 pre-heating
- 2 system (see table OVEN SYSTEMS)
- 3 temperature in the oven

### ADDITIONAL SETTINGS

- 4 duration of baking (see chapter TIMER FUNCTIONS – DURATION)
- 5 Multiphase cooking (see chapter Multiphase cooking)
- 6 (steam injection) (see chapter STEAM INJECTION)

## PREHEATING










Use the preheat function if you wish to heat the oven to the desired temperature as quickly as possible. When this symbol  is selected, the preheat function will be activated and a notification will appear: **"Preheating started."** Do not insert the food yet. Actual and set temperature will alternate on the display.


When the selected temperature is reached, the preheating process stops and an acoustic signal is emitted.

The following notification will appear on the display: **"Preheating complete."** Open the door and insert the food. The program then resumes the cooking process with selected settings.






 When the preheat function is set, delayed start function cannot be used.




## OVEN SYSTEMS (depending on the model)

SYSTEM	DESCRIPTION	PRESET TEMPERATURE (°C)	MIN - MAX TEMPERATURE (°C)
OVEN SYSTEMS			
	<b>TOP + BOTTOM HEAT</b> The heaters in the bottom and in the ceiling of the oven cavity will radiate heat evenly into the oven interior. Pastry or meat can only be baked/roasted at a single height level.	200	30-230
	<b>TOP HEAT</b> Only the heater on the oven cavity ceiling will radiate heat. Use this heater to brown the upper side of the dish.	150	30-230
	<b>BOTTOM HEAT</b> Only the heater on the bottom of the oven cavity will radiate heat. Use this heater to brown the lower side of the dish.	160	30-230
	<b>SMALL GRILL</b> Only grill heater, a part of the large grill set, will operate. Use this heater to grill a few open sandwiches or beer sausages, or for toasting bread.	230	30-230
	<b>LARGE GRILL</b> The upper heater and the grill heater will operate. The heat is radiated directly by the grill heater installed in the oven ceiling. To boost the heating effect, the upper heater is activated as well. This system is used for grilling a smaller amount of open sandwiches or beer sausages, and for toasting bread.	230	30-230
	<b>LARGE GRILL + FAN</b> Grill heater and the fan will operate. This combination is used to grill meat and to roast larger chunks of meat or poultry at a single height level. It is also appropriate for dishes au gratin and for browning to a crispy crust.	170	30-230
	<b>HOT AIR + BOTTOM HEAT</b> Bottom heater, round heater, and the fan will operate. This is used to bake pizza, moist pastry, fruitcakes, leavened dough and shortcrust on several levels simultaneously.	200	30-230
	<b>HOT AIR</b> Round heater and the fan will operate. The fan installed in the back wall of the oven cavity makes sure the hot air constantly circulates around the roast or pastry. This mode is used for roasting meat and baking pastry at several levels simultaneously.	180	30-230
	<b>ECO HOT AIR <sup>1)</sup></b> In this mode, power consumption during the cooking process is optimized. This mode is used for roasting meat and baking pastry.	180	120- 230
	<b>BOTTOM HEAT + FAN</b> This is used for baking leavened but low-rising pastry and for preserving fruit and vegetables.	180	30-230

SYSTEM	DESCRIPTION	PRESET TEMPERATURE (°C)	MIN - MAX TEMPERATURE (°C)
OVEN SYSTEMS			
	<b>ROASTING</b> In the Auto Roast mode/system, the upper heater will operate in combination with the grill heater and the round heater. It is used for roasting all types of meat.	180	30-230


<sup>1)</sup> It is used for determining the energy efficiency class pursuant to the EN 60350-1 standard.

SYSTEM	DESCRIPTION	PRESET TEMPERATURE (°C)	MIN - MAX TEMPERATURE (°C)
	<b>STEAM</b>		
	<b>HOT AIR WITH STEAM</b> This system is used for cooking and defrosting. It allows quick and efficient cooking without changing the colour or shape of the food. Three options are available:	160	
	<b>HIGH:</b> cooking escalopes, steaks, and smaller chunks of meat		30-230
	<b>MEDIUM:</b> reheating cool/frozen meals, cooking fish fillets and vegetables au gratin		30-230
	<b>LOW:</b> cooking large chunks of meat (roast, whole chicken), baking risen dough (bread and rolls), cooking lasagne etc.		30-230
	<b>STEAM</b> Use this for all types of meat, stews, vegetables, pies, cakes, bread, and dishes au gratin (i.e. food that require longer cooking time).	100	-
	<b>SOUS VIDE</b> is a slow cooking procedure with food vacuum sealed and cooked at a specific temperature that is accurately maintained. The sous vide method is suitable for cooking meat, fish, and all types of fruit and vegetables. Food cooked in this way is juicy and it develops a fuller flavour.	50	30-100


COOKING SYSTEMS	DESCRIPTION	PRESET TEMPERATURE (°C)	POWER (W)
	<b>MICROWAVE</b> Microwaves are used for cooking and defrosting. They allow quick and efficient cooking without changing the colour or shape of the food.	-	1000
	<b>HOT AIR + MICROWAVE</b> Use this for all types of meat, stews, vegetables and dishes au gratin (i.e. food that require longer cooking time).	160	600
	<b>GRILL + FAN + MICROWAVE</b> Use this combination for smaller chunks of meat, fish and vegetables. It allows fast cooking and the food will have a nicely browned crispy crust.	200	600

POWER LEVEL	USE
1000 W	<ul style="list-style-type: none"> <li>• Quickly reheating beverages, water and dishes containing a large volume of liquid.</li> <li>• Cooking dishes with high water content (soups, sauces etc.).</li> </ul>
750 W	<ul style="list-style-type: none"> <li>• Cooking fresh or frozen vegetables.</li> </ul>
600 W	<ul style="list-style-type: none"> <li>• Melting chocolate.</li> <li>• Cooking fish and seafood; reheating on two levels.</li> <li>• Cooking dried beans at low heat.</li> <li>• Reheating and cooking of delicate egg-based dishes.</li> </ul>
360 W	<ul style="list-style-type: none"> <li>• Low-heat cooking of dairy products or jams.</li> </ul>
180 W	<ul style="list-style-type: none"> <li>• Manual defrosting; softening butter or ice cream.</li> </ul>
90 W	<ul style="list-style-type: none"> <li>• Defrosting cream-filled pastry.</li> </ul>


Touch the **START/STOP** button to start the baking process.  
The display shows all the selected settings.

 The symbol °C flashes on the display until the set temperature is reached. A sound signal beeps. During the process you cannot change the baking systems.

## TIMER FUNCTIONS – DURATION

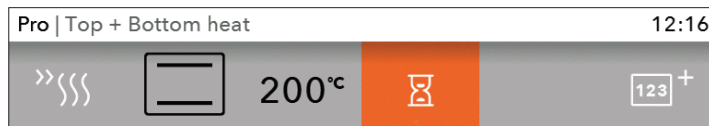

In the basic Professional mode you can select the **Timer function**. Confirm your selection by pressing the KNOB.

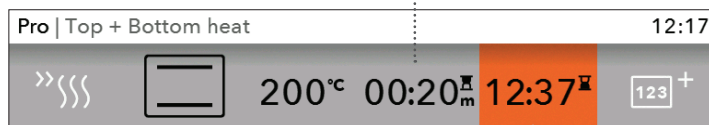

Duration of oven operation

Delayed start



### Setting the cooking time

In this mode, you can define the duration of oven operation. Set the desired cooking time and confirm the selection (max. cooking time is 10 hours). The displayed end time is adjusted accordingly. Press START to start the cooking process. The display shows all the selected settings. Turn off all timer functions by setting the selected time to 0.



### Setting the delayed start

In this mode, you may specify the duration of the cooking process (cooking time) and the time when you wish the cooking process to stop (end time) (the delay can be set for 24 hours). Make sure the clock is accurately set to current time.

Example:

Current time: 12:00

Cooking time: 2 hours

End of cooking: 18:00

First, set the COOKING TIME (2 hours). The sum of the current time and cooking time is automatically displayed (14:00). Then select END TIME and set the timer (18:00).

Press START to start the cooking process. The timer will wait for the time to start the cooking process. The display shows the message:

**"Start delayed. Cooking will start at 16:00."**




When the set time expires, the oven will automatically stop operating (end of cooking). A short acoustic signal will be emitted and the Finish menu will appear.

After a few minutes of inactivity, the appliance goes into Standby mode.

# MULTIPHASE COOKING

This mode allows you to combine three consequent different manners of food preparation in one baking process.  
By selecting different settings you can prepare dishes exactly as you wish.

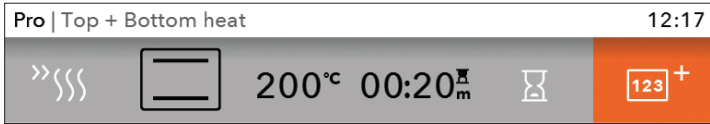

In the basic Pro mode, **Multiphase cooking** and Steam are available.  
Confirm the setting by pressing on the KNOB.




Select:  
step 1, step 2, step 3  
Confirm the step by pressing the KNOB.

💡 Step 1 is already selected if you have set the **Timer functions** beforehand.



Set the system, temperature and time. Confirm your settings with a CHECK MARK by pressing the KNOB.

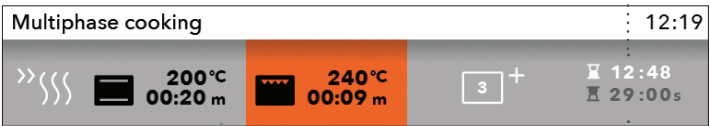


Entire baking time - end

Progress of the current step

Temperature and duration of the selected step

By touching the START key, the oven first starts operating according to step 1. (The progress bar on the bottom of the display indicates the current step of the baking process). When a certain time expires, step 2 is activated and then step 3 if it was selected.




 If you want to cancel any of the steps during the operation, turn the KNOB, select the step and cancel it by confirming with a CROSS MARK. You can only do this with the steps that haven't been initiated yet.

# STEAM INJECTION

Steam injection is recommended when cooking:

- **meat** (towards the end of the cooking process): the meat will be juicier and softer, and basting is not required. Meat: beef, veal, pork, venison, poultry, lamb, fish, sausages;
- **bread and bread rolls**: use steam during the first 5-10 minutes of baking. The crust will be crunchy and nicely browned;
- **vegetable and fruit soufflés**, lasagne, starchy dishes, puddings;
- **vegetables**, especially potatoes, cauliflower, broccoli, carrots, zucchini, and eggplant.

Steam injection is possible in **professional mode** when selecting cooking time. Cooking time must be long enough to allow steam injection.

 **Total cooking time may not be shorter than 10 minutes.**



For steam injection, select the **+ symbol**. Confirm the setting by pressing the knob.




Rotate the KNOB and select a function.  
- Multiphase cooking (See chapter MULTIPHASE COOKING.)  
- Steam injection intensity in three levels

## A) STEAM INJECTION BY STEPS

 
Set the steps (see chapter MULTIPHASE COOKING). Select the **+ symbol** for steam injection. The system will automatically calculate individual steam injections according to total cooking time. Touch the START/STOP key to start oven operation.

## B) DIRECT STEAM INJECTION

Direct steam injection takes place during the cooking process. Select the symbol . A warning appears: **"Would you like to inject steam?"** The symbol flashes until the process is complete. Direct steam injection can be repeated in three steps; then, the steam symbol disappears.



# C) STORING YOUR OWN PROGRAMME (MY MODE)

When the cooking process is complete, the "Finish" menu will appear. Select the  symbol to store your settings into the oven memory.




Select the field with asterisks for which you will select a new recipe name.


 You can store up to 12 recipes in the memory.




Rotate the KNOB and confirm respective characters to enter the name. If required, delete a character with the arrow; store the name with the check mark.

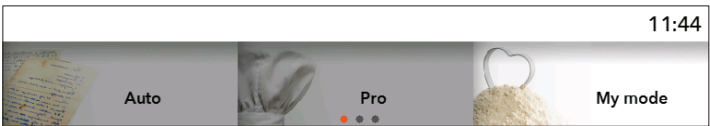

You can retrieve your favourite recipes by choosing My mode in the main menu. Confirm your selection with the KNOB.

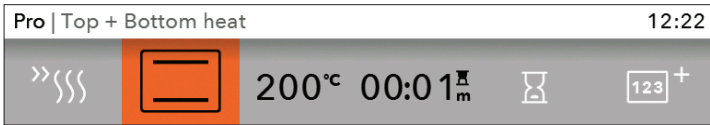

 
The pre-set values are shown and you can change them if necessary.

When the program is complete, the **Finish** menu will appear. If you have made any changes, you can store them by selecting the  symbol. Select a recipe with the same name. The sign "**The program will be overwritten**" appears on the display.


- Confirm the selection to store the recipe under the same or a new name.
- You may also cancel your selection. A display will appear on which you can select a new field and store the new recipe.

## D) STEAM COOKING (Steam – quick access to steam programs)

 Confirm each setting by pressing the KNOB.




Rotate the KNOB and select the **Steam mode**. Confirm your selection by pressing the KNOB.

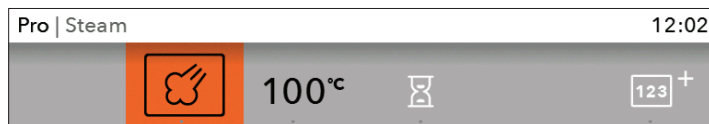

Choose your own basic settings.

- 1 System
- 2 Oven temperature
- 3 Cooking duration
- 4 Multiphase cooking (see chapter MULTIPHASE COOKING)

 Use the preheat function if you wish to heat the oven to the desired temperature as quickly as possible.

Fill the **water tank** with fresh water up to the MAX marking. Use the STEAM SET to cook vegetables, fish, meat, and potatoes – when not cooking in a sauce. Place the steam set into the 2nd guide.

# SOUS VIDE (STEAM COOKING)


Season the food and seal it in a plastic bag suitable for vacuum sealing and sous vide cooking. Place the sealed bag containing the food onto the perforated tray and place it on the middle oven shelf.



Rotate the KNOB and select **Extras** in the main menu. Confirm your selection by pressing the KNOB.



Rotate the KNOB and select **Sous-vide**.

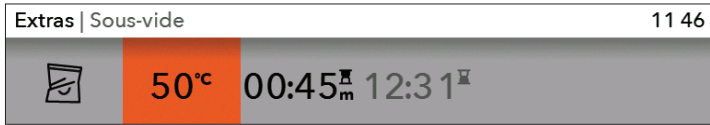

Choose the cooking temperature and time. Cook the food for a long period of time at a low temperature (see cooking table).

After the cooking process, remove the food from the bag. For a more intense flavour, the food can be quickly seared over hot oil.

Dish	Thickness (cm)	Temperature icon (°C)	Cooking time (minutes)
<b>MEAT</b>			
Beef steak, medium	3	60	150-180
Beef steak, well done	3	70	140-170
Pork steak, medium	3	65	70-100
Pork steak, well done	3	70	70-100
Lamb steak, medium	2	60	90-120
Lamb steak, well done	2	70	70-100
Veal steak, medium	3	60	90-120
Veal steak, well done	3	70	70-100
Boneless chicken breast	3	65	90-120
Boneless duck breast	3	65	120-150
Boneless turkey breast	5	65	180-210
Fish fillet	1	55	40-60
Fish steak	2	55	40-60
Shrimps	/	60	30-40
Octopus, tentacles	/	85	180-240
Scallops	/	60	40-60
Carrots, chopped/sliced	1	85	90-120
Potatoes, cubed	2	85	100-130
Asparagus	/	85	50-70
Eggplant / aubergines	1	85	50-70
Fruit, chunks	/	70	90-120


## E) COOKING WITH MICROWAVES



Confirm each setting by pressing the KNOB.



Rotate the KNOB and select **Microwaves**. Confirm the by pressing the KNOB.

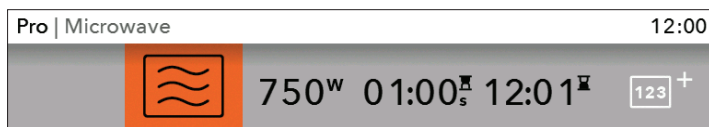

Select the settings by rotating the KNOB and pressing it to confirm.

- 1 Microwave system
- 2 Operating power / temperature (for combined systems)
- 3 Cooking duration
- 4 Delayed start
- 5 Step mode (see section MULTIPHASE COOKING)

In microwave systems, you cannot use the delayed start function.

Touch the START/STOP key to start oven operation.

Selected settings and the time counting down will be displayed on the display unit.




If you selected a combined system with microwaves, the symbol °C will flash until the set temperature is reached.

# START THE COOKING PROCESS

The START/STOP key will flash before the start of the cooking process.


Start the cooking process by touching the START/STOP key.  
Press and rotate the KNOB to change the current settings during cooking.



 If you open the door during operation, the cooking process will stop. It will resume when you close the door again. This has to be done within no more than 3 minutes; otherwise, operation will be aborted and "Finish" will appear on the display.

# END OF COOKING AND SWITCHING OFF THE OVEN

For a pause in the cooking process, press the START/STOP key.

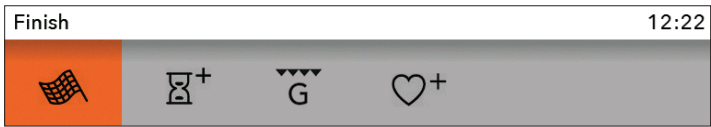

Turn the KNOB and the menu **Finish** appears along with the symbols.



## Finish

Select the icon and end the baking process. The display shows the main menu.



## Add duration

You can extend the duration of baking by selecting the icon.  
You can determine a new time of the end of baking (see chapter  
TIMER FUNCTIONS – DURATION).



## Au gratin


Choose this symbol to brown the upper layer of the dish after cooking.



## Add to favourites

You can store the selected settings in the oven memory and use them again the next time.

# SELECTING ADDITIONAL FEATURES

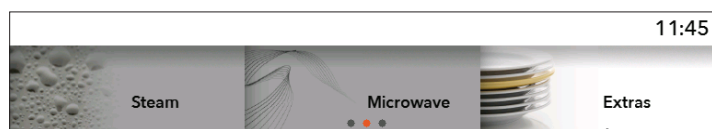

Turn the KNOB and select **Extras** in the main menu. Confirm your selection. The additional functions menu is displayed.



Some functions are not available with some systems; an acoustic signal sounds in such cases.

## Steam cleaning (steam-clean)

This program makes it easier to remove any stains from inside the oven.

(See chapter CLEANING AND MAINTENANCE.)

## Defrost

In this mode, the air circulates without any heaters operating. Only the fan is operating.

It is used for slow defrosting of frozen food (cakes, pastry, bread and rolls, and deep-frozen fruit).

By selecting the symbol, set the type of food, weight, and the time of start and end of defrosting process.

Halfway through the defrost time, the pieces should be turned over, stirred and separated if they were frozen together.

## Reheating

Reheating can be used to keep the food that is already cooked warm. Select the symbol to set the temperature, and reheating start and end time.

## Plate warmer

Use this function to pre-heat your dinnerware (plates, cups) before serving food in it to keep the food warm longer. By selecting the symbol, you can set the temperature and the time of start and end of the heating process.

## Regenerate

This cooking mode can be used to reheat the food that has already been cooked. As the food is reheated with steam, it does not lose its quality.

The flavour and texture are maintained as if the food was freshly cooked. Several dishes can be regenerated at the same time.


- With this function, you can select the start and the end of the regeneration process.

## Rapid pre-heat

Use this function if you wish to heat the oven to the desired temperature as quickly as possible. Not appropriate for cooking food. When the oven heats up to the set temperature, the heating process is completed and the oven is ready for operation in the selected programme.

## Shabbat

In this mode set the temperature between 85 and 180 °C and set the time (up to 74 hours) for Sabbath activities. Press START to start the countdown. A light will be lit in the oven. All sounds and operation will be deactivated, except for the ON/OFF key. After the end, you can save your settings.


 In the case of power outage, Shabbat mode is cancelled and oven goes back in the start position.



**Warning: producer is not responsible for improper use of Shabbat mode.**

## Sous vide


It is used for slow cooking in vacuum, using steam. Slowly cook the vacuum-sealed food at a low temperature. The food will develop a fuller flavour and more vitamins and minerals will be retained.

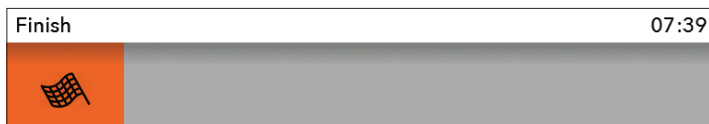


Turn the KNOB to display the **Finish** menu with a display of symbols.



# SELECTING GENERAL SETTINGS

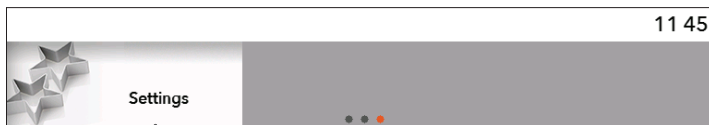

Turn the KNOB and select **Settings** in the main menu. Confirm your selection.

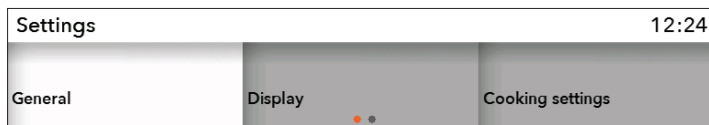

By turning the KNOB you can move around the menu. Confirm each selection by pressing the KNOB.

## General

**Language** – select the language in which you want the text to be displayed.

**Date** – set the date when connecting the appliance to the power mains for the first time or if the appliance has been disconnected from the power mains for a longer period of time (more than one week). Set the day, month and year.

**Time** – time of day must be set when you connect the appliance to the power mains for the first time or if the appliance has been disconnected from the power mains for a longer period of time (more than one week). Set the CLOCK - time. In the Time field you can also select digital or analogue clock display.

**Sound** – the volume of the sound signal can be set only when no time feature is activated (only the time of day is shown).

Volume - you can choose three different levels of volume.

Sound of key - you can activate or deactivate it.

Sound on start/stop - you can activate or deactivate it.

## Display

In this menu you can set:

**Brightness** - you can set three different levels.

**Night mode** - set the timeframe when you want the display to be dimmed.

**Appliance to stand-by mode** - the display automatically switches off after 1 hour.

## Cooking settings

**Steam**

**Descaling procedure.**

**Water hardness**

**My microwave settings**

**Default program intensity**

## System

### Appliance information

#### Factory settings

**Oven light during operation** - illumination is turned off when you open the door during the baking process.

**Oven illumination** - oven illumination is activated automatically when you open the door or turn on the oven. When the baking process is finished, the light stays on for about 1 minute. You can turn the light on or off by pressing the light button.



## CHILD LOCK

It is activated by touching the CHILD LOCK key. The message **"Child lock ON"** is displayed. Touch the key again to deactivate the child lock.



If the child lock is activated with no timer function engaged (only clock is displayed), the oven will not operate. If the child lock is activated after a timer function has been set, the oven will operate normally; however, it will not be possible to change the settings. When the child lock is activated, systems or additional functions cannot be changed. The only possible change is to end the cooking process. Child lock will remain active after the oven is switched off. To select a new system, the child lock must first be deactivated.



## SETTING THE MINUTE MINDER

The minute minder can be used separately, independently of the oven operation. It is activated by pressing the key. The maximum setting is 10 hours. When the set time expires, an acoustic signal sounds, which can be turned off by pressing any key or is turned off automatically after one minute.



**After a power outage or after the appliance is switched off, all additional settings will remain stored.**

# DESCRIPTIONS OF SYSTEMS (COOKING MODES) AND COOKING TABLES

---

If your desired food cannot be found in the cooking table, find information for similar food. The information displayed applies to cooking in a single level.

An interval of suggested temperature is indicated. Start with a lower temperature setting and increase it if you find the food is not browned sufficiently.

Cooking times are rough estimates and may vary subject to some conditions.

**Only preheat the oven** if required by the recipe of in the tables in this instruction manual. Heating an empty oven consumes a lot of energy. Hence, baking several types of pastry or several pizzas successively will save a lot of energy as the oven will already have been preheated.

When using parchment paper, make sure it is resistant to high temperatures.

When cooking larger chunks of meat or pastry, a lot of steam will be generated inside the oven, which in turn may condense on the oven door. This is a normal phenomenon which will not affect the operation of the appliance. After the cooking process, wipe the door and the door glass dry.


**Switch off the oven approximately** 10 minutes before the end of the cooking process to save energy by making use of the accumulated heat.

Do not cool the food in a closed oven to prevent condensation (dew).



The symbol \* means that the oven should be preheated using the selected cooking system.

# TOP + BOTTOM HEAT

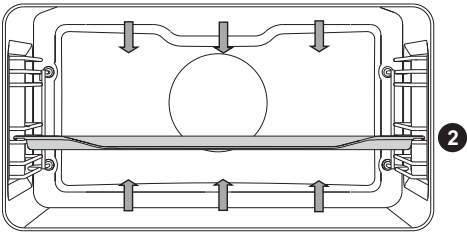

The heaters in the bottom and in the ceiling of the oven cavity will radiate heat evenly into the oven interior.

## Roasting meat

Use enamel coated, tempered glass, clay, or cast iron pans or trays. Stainless steel trays are not suitable as they strongly reflect the heat. During roasting, provide enough moisture to keep the meat from burning. Turn the meat during roasting. If you cover the roast, it will remain juicier.

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
MEAT				
Pork roast	1500	1	180-200	90-120
Pork shoulder	1500	1	180-200	110-140
Pork roulade	1500	2	180-200	90-110
Roast beef	1500	1	170-190	120-150
Veal roulade	1500	2	180-200	80-100
Lamb sirloin	1500	1	180-200	60-80
Rabbit loin	1000	2	180-200	50-70
Deer shank	1500	1	180-200	90-120
Meat rolls	/	2	180-200	15-30
FISH				
Braised fish	200 g/piece	2	190-210	40-50

## Baking pastry

Only use one level and dark baking sheets or trays. In light-coloured baking sheets or trays, the browning of the pastry will be poorer, as such equipment will reflect the heat. Always place the baking trays on the grid. If you are using the supplied baking sheet, remove the grid. Cooking time will be shorter if the oven is preheated.


Type of food	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
<b>PASTRY</b>			
White bread, 1 kg *	2	220	10-15
		180-190	30-40
Buckwheat bread, 1 kg *	2	180-190	50-60
Whole grain bread, 1 kg *	2	180-190	50-60
Rye bread, 1 kg *	2	180-190	50-60
Spelt bread, 1 kg *	2	180-190	50-60
Sweet soufflé	2	170-190	40-50
Bread rolls *	2	190-210	20-30
Walnut cake	1	170-180	50-60
Sponge cake *	1	160-170	30-40
Macarons (meringue pastry)	2	130-150	15-25
Vegetable rolls	2	190-200	25-35
Fruit rolls	2	190-200	25-35
Small pastries made with yeast dough	2	200-210	20-30
Cabbage pirozhki *	2	190-200	25-35
Fruitcake	1	130-150	80-100
Meringue cookies	2	80-90	110-130
Jelly-filled rolls (Buchtel)	2	170-180	30-40

Tip	Use
<b>Is the cake done?</b>	<ul style="list-style-type: none"> <li>• Pierce the cake at the top with a wooden toothpick or skewer. If there are no traces on the pick or the skewer when pulled out, the cake is done.</li> </ul>
<b>Did the cake collapse?</b>	<ul style="list-style-type: none"> <li>• Check the recipe.</li> <li>• Next time, use less liquid.</li> <li>• Note the mixing time when using small mixers, blenders etc.</li> </ul>
<b>The cake is too light at the bottom?</b>	<ul style="list-style-type: none"> <li>• Use a dark-coloured baking sheet or tray.</li> <li>• Place the baking sheet one guide lower and switch on the lower heater towards the end of the cooking progress.</li> </ul>
<b>Cake with moist stuffing is underdone?</b>	<ul style="list-style-type: none"> <li>• Increase temperature and extend baking time.</li> </ul>



**Do not insert the deep baking tray into the first guide.**

# LARGE GRILL, SMALL GRILL

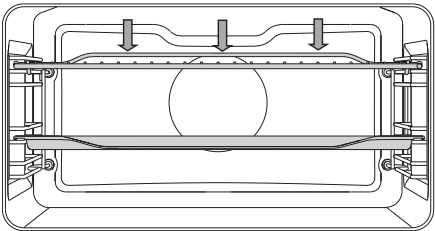

When grilling food with the large grill, the upper heater and the grill heater fitted on the ceiling of the oven cavity will operate.

When grilling with the small grill, only the grill heater (a part of the large grill set) will operate.

Max allowed temperature : 230°C.

Pre-heat the infra red (grill) heater for five minutes. Supervise the cooking process at all times. The meat may burn quickly due to high temperature!  
Roasting with the grill heater is suitable for crispy and low-fat cooking of bratwurst, cuts of meat and fish (steaks, escalopes, salmon steaks etc.) or toasted bread.

When grilling directly on the grid, smear it with oil to prevent the meat from sticking onto it and insert it into the 4th guide. Insert the drip tray into the 1st or 2nd guide.

When grilling in a tray, provide enough moisture to keep the meat from burning. Turn the meat during grilling.

After each grilling, clean the oven and the accessories.

## Grilling table - small grill

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
<b>MEAT</b>				
Beefsteak, rare	180 g/piece	3	230	20-25
Pork neck fillet	150 g/piece	3	230	25-30
Cutlets/chops	280 g/piece	3	230	30-35
Grill sausages	70 g/piece	3	230	20-25
<b>TOASTED BREAD</b>				
Toast	/	3	230	5-10
Open sandwiches	/	3	230	5-10

## Grilling table - large grill

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
<b>MEAT</b>				
Beefsteak, rare	180 g/piece	3	230	10-15
Beefsteak, well done	180 g/piece	3	230	15-20
Pork neck fillet	150 g/piece	3	230	15-20
Cutlets/chops	280 g/piece	3	230	20-25
Veal escalope	140 g/piece	3	230	15-20
Grill sausages	70 g/piece	3	230	10-20
Spam (Leberkäse)	150 g/piece	3	230	15-20
<b>FISH</b>				
Salmon steaks/fillets	200 g/piece	3	230	15-20
<b>TOASTED BREAD</b>				
6 slices of bread	/	3	230	1-4
Open sandwiches	/	3	230	2-5

Always keep the oven door closed when using the grill (infrared) heater.

Grill heater, grid, and other oven accessories get very hot during grilling. Therefore, use oven mitts and meat tongs.




**Always keep the oven door closed when using the grill (infrared) heater.**

**Grill heater, grid, and other oven accessories get very hot during grilling. Therefore, use oven mitts and meat tongs.**



# LARGE GRILL + FAN

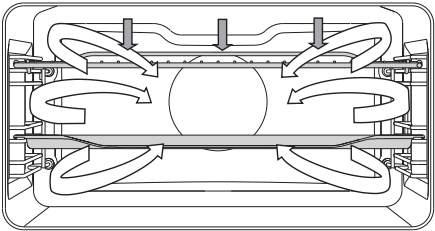


In this operating mode, the grill heater and the fan operate simultaneously. Suitable for grilling meat, fish, and vegetables.

(See descriptions and tips for Large grill and Small grill.)

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
MEAT				
Duck	2000	1	180-200	90-110
Pork roast	1500	1	170-190	90-120
Pork shoulder	1500	1	160-180	100-130
Half of chicken	700	1	190-210	50-60
Chicken	1500	1	200-220	60-80
Meat loaf	1500	1	160-180	70-90
FISH				
Trout	200 g/piece	2	200-220	20-30

# HOT AIR + BOTTOM HEAT

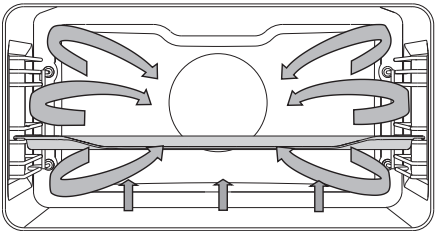


The bottom heater, the round heater, and the hot air fan will operate. Suitable for baking pizzas, apple pies, and fruitcakes.

(See descriptions and tips for UPPER and BOTTOM HEATER.)

Type of food	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
Cheesecake, short crust	2	160-170	60-70
Pizza *	2	220-230	10-15
Quiche Lorraine, shortcrust	1	200-210	50-60
Apple strudel, phyllo dough	2	180-190	50-60

# HOT AIR

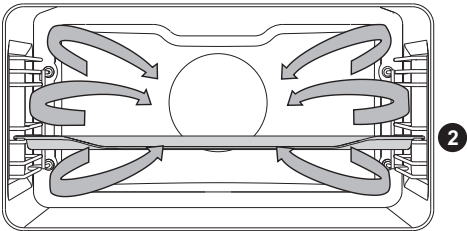

Round heater and the fan will operate. The fan installed in the back wall of the oven cavity makes sure the hot air constantly circulates around the roast or pastry.

## Roasting meat:

Use enamel coated, tempered glass, clay, or cast iron pans or trays.  
Stainless steel trays are not suitable as they strongly reflect the heat.

During roasting, provide enough moisture to keep the meat from burning. Turn the meat during roasting. If you cover the roast, it will remain juicier.

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
MEAT				
Pork roast, including skin	1500	1	170-190	90-120
Chicken, whole	1500	2	180-200	70-90
Duck	2000	1	170-190	120-150
Chicken breast	1000	2	190-210	50-60
Stuffed chicken	1500	1	190-210	110-130

## Baking pastry

Pre-heating of the oven is recommended.

Small pastries can be baked in low trays in several levels (2nd and 3rd).

Keep in mind that with different baking trays, the baking time may vary.

You may have to remove the upper tray sooner than the lower one.

Always place the baking pans on the grid; if you are using the supplied baking tray, remove the grid.


Small pastries should be of the same thickness in order to achieve even browning.

Type of food	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
<b>PASTRY</b>			
Sponge cake	1	160-170	30-40
Crumble cake	2	170-180	25-35
Plum cake	1	160-170	30-40
Sponge roll *	2	170-180	15-25
Fruit cake, short crust	1	170-180	50-70
Challah (braided yeast bun)	2	170-180	35-50
Apple strudel	2	180-190	50-60
Pizza *	2	210-220	15-20
Biscuits, short crust *	2	160-170	15-25
Biscuits, pressed *	2	150-160	20-30
Small cakes *	2	150-160	20-30
Cookies, leavened	2	180-190	20-35
Cookies, phyllo dough	2	180-190	20-30
Cream-filled pastry	2	190-200	25-45
<b>FROZEN PRODUCTS</b>			
Apple and cottage cheese strudel	2	180-190	55-70
Pizza	2	190-200	20-35
Fried potatoes, oven-ready	2	210-220	25-40
Croquettes, oven-baked	2	210-220	20-35



**Do not insert the deep baking tray into the first guide.**

# ECO HOT AIR

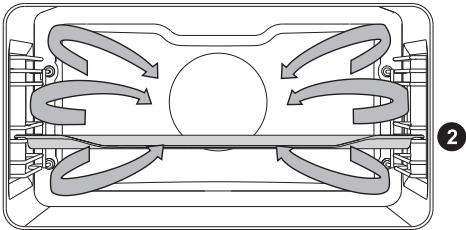


Round heater and the fan will operate. The fan installed on the back wall of the oven cavity makes sure the hot air constantly circulates around the meat, vegetables, or pastry.

Type of food	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
<b>MEAT</b>			
Pork roast, 1 kg	1	200-210	110-130
Pork roast, 2 kg	1	200-210	130-150
Beef roast, 1 kg	1	210-220	100-120
<b>FISH</b>			
Whole fish, 200 g/piece	2	200-210	40-50
Fish fillet, 100 g/piece	2	210-220	25-35
<b>PASTRY</b>			
Pressed cookies	2	180-190	20-30
Small cupcakes	2	190-200	30-35
Sponge roll	2	200-210	15-25
Fruit cake, short crust	1	190-200	55-65
<b>DISHES AU GRATIN</b>			
Potatoes au gratin	2	190-200	40-50
Lasagne	2	200-210	45-55
<b>FROZEN PRODUCTS</b>			
Pommes frites, 1 kg	2	230-230	35-45
Chicken medallions, 0.7 kg	2	220-230	30-40
Fish sticks, 0.6 kg	2	220-230	30-40



Do not insert the deep baking tray into the first guide.

# BOTTOM HEAT + FAN

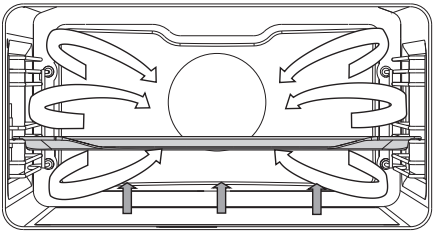

This is used for baking leavened but low-rising pastry and for preserving fruit and vegetables. Use the second guide from the bottom and a rather shallow baking tray to allow the hot air to circulate across the upper side of the dish.

## PRESERVATION


Prepare the food to be preserved and jars as usual. Use jars with a rubber sealing ring and a glass cover. Do not use jars with threaded or metal caps or metal tins. Make sure the jars are of equal size, filled with the same contents, and tightly sealed.

Pour 1 litre of hot water into the deep tray (approx. 70°C) and place 6 1-litre jars into the tray. Place the tray into the oven on the second guide.

During preservation, observe the food and cook until the liquid in the jars starts to simmer – when bubbles appear in the first jar.

Type of food	Guide (from the bottom)	Temperature (°C)	Cooking time (min)	Temperature at the start of simmering	Resting time in the oven (min)
FRUIT					
Strawberries (6×1 l)	2	180	40-60	switch off	20-30
Stone fruits (6×1 l)	2	180	40-60	switch off	20-30
Fruit mush (6×1 l)	2	180	40-60	switch off	20-30
VEGETABLE					
Pickled gherkins (6×1 l)	2	180	40-60	switch off	20-30
Beans/carrots (6×1 l)	2	180	40-60	120 °C, 60 min	20-30

# ROASTING

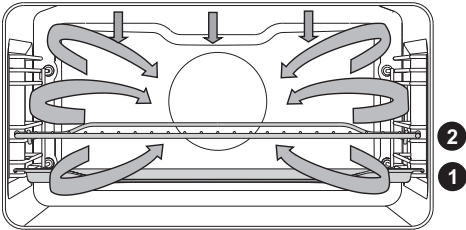


In the Auto Roast mode, the upper heater will operate in combination with the grill heater and the round heater. It is used for roasting all types of meat.

When roasting directly on the grid, smear it with oil to prevent the meat from sticking onto it and insert it into the 2rd guide. Insert the drip tray into the 1nd or 2nd. When roasting meat in the tray, insert the tray into the 1nd guide. Set the cooking system and temperature, and the final temperature of the dish.

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
Beef tenderloin	1000	2	170-190	60-80
Chicken, whole	1500	2	180-200	65-85
Turkey	4000	2	170-190	150-180
Pork roast	1500	2	170-190	100-120
Meat loaf	1000	2	170-190	50-65
Veal	1000	2	170-190	70-90
Lamb	1000	2	180-200	50-70
Venison	1000	2	180-200	60-90
Whole fish	1000	2	170-190	40-50
Chicken thighs	1000	2	190-210	45-55

# HOT AIR WITH STEAM

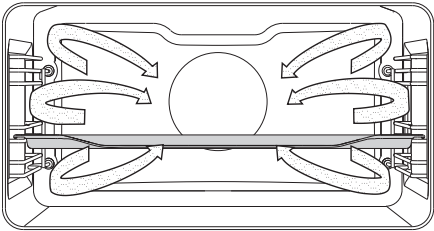


Water from the steam generator enters the oven cavity in the form of steam. In addition, round heater with fan operates to provide continuous circulation of the hot air and steam.

💡 Fill the water tank with fresh water.

Type of food	Weight (g)	Guide (from the bottom)	Steam intensity	Temperature (°C)	Cooking time (min)
Beef/leg	1000	1	1	170-190	80-110
Beef/tenderloin	1000	1	2	180-200	50-70
Veal/leg	1000	1	1	180-200	80-110
Lamb	1000	1	1	180-200	60-90
Poultry, whole	1500	1	1	180-200	65-85
Poultry/breast	1000	2	3	180-200	50-60
Pork/fillet	1000	1	2	180-200	50-70
Fish	200 g/ piece	2	2	190-210	25-35
Potatoes	1000	2	1	190-210	45-60
Potatoes with broccoli	1000	2	2	180-200	35-50



# STEAM

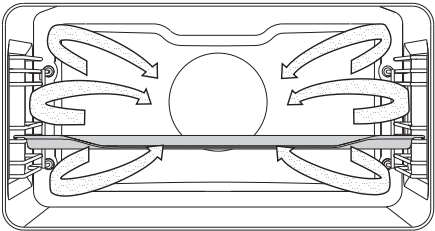

Water from the steam generator enters the oven cavity in the form of steam.

 Fill the water tank with fresh water.

## Meat

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
Sauerkraut and sausage	700	2	100	30-40
Beef steak	1000	2	100	40-50
Chicken breast	1000	2	100	20-30
Shrimps	1000	2	100	20-30
Fish fillet	500	2	80	15-20
Fish steak	500	2	80	20-25
Whole fish	400	2	100	20-30
Mussels	1000	2	100	15-20
Frankfurter sausage	1000	2	85	10-15

# Vegetable

Type of food	Weight (g)	Ratio food:liquid	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
String beans	500	/	2	100	55-65
Beans – seeds	500	1:2	2	100	90-100
Peas	500	/	2	100	20-25
Cauliflower – whole	500	/	2	100	25-35
Cauliflower – chopped	500	/	2	100	15-25
Broccoli – whole	500	/	2	100	20-30
Broccoli – chopped	500	/	2	100	15-25
Carrot – whole	500	/	2	100	25-35
Carrot – diced	500	/	2	100	20-30
Corn	500	/	2	100	25-35
Chickpeas	500	1:2	2	100	85-95
Fennel	500	/	2	100	15-25
Kohlrabi	500	/	2	100	25-35
Red beets - whole	500	/	2	100	65-75
Bell peppers	500	/	2	100	15-20
Radicchio	500	/	2	100	15-20
Brussels sprout	500	/	2	100	20-30
Asparagus	500	/	2	100	15-25
Spinach	500	/	2	100	10-15
Swiss chard	500	/	2	100	15-20
Mixed vegetables	1000	/	2	100	25-35
Cabbage	500	/	2	100	35-45
Chinese cabbage	500	/	2	100	30-40
Eggplant / aubergines	500	/	2	100	10-20
Courgettes	500	/	2	100	10-20
Potatoes, whole	500	/	2	100	30-40
Potatoes, sliced	500	/	2	100	25-35

# Pasta/rice/cereals

Type of food	Weight (g)	Ratio food:liquid	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
White rice	200	1:2	2	100	25-35
Brown rice	200	1:2	2	100	55-65
Risotto	Recipe	1:2	2	100	30-40
Pasta	200	1:2	2	100	15-25
Whole grain pasta	200	1:2	2	100	15-25
Millet	250	1:1	2	100	25-35
Gnocchi	500	/	2	100	15-25
Dumplings	500	/	2	100	15-25
Tortellini	500	/	2	100	20-30
Couscous	500	1:1	2	100	15-20
Ravioli	500	/	2	100	15-20

# Desserts

Type of food	Weight (g)	Ratio food:liquid	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
Melting chocolate *	200	/	2	50	20-30
Soaking/dissolving gelatin *	1 pack	/	2	50	15-20
Rice pudding	Recipe	1:4	2	100	30-40
Leavened dough	Recipe	/	2	40	25-35
Crème caramel	Recipe	/	2	100	40-50

\* Cover the container with a lid or foil

# Egg dishes

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
Soft-boiled eggs	200	2	100	10-15
Hard-boiled eggs	200	2	100	15-20
Poached eggs	200	2	100	13-17
Scrambled eggs	200	2	100	10-15
Omelette with bacon	Recipe	2	100	15-20


## Fruit

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
Apple slices	500	2	100	5-15
Apricot slices	500	2	100	5-15
Cherries	500	2	100	10-15
Gooseberries	500	2	100	5-15
Pear – chunks	500	2	100	5-15
Plums	500	2	100	5-15
Rhubarb	500	2	100	5-15
Nectarines	500	2	100	5-10


## Defrosting

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Defrosting time (min)
Frozen meat	500	2	50	40-50
Frozen poultry	1500	2	50	50-60
Frozen fish, 200 g / piece	1000	2	50	35-45
Frozen fruit	500	2	50	10-20
Frozen ready-made meals	1000	2	60	45-60



To dry the inside of the oven, set hot air and bottom heater  to 170 °C for 15 minutes. After the end of the programme leave the oven door open for at least two minutes to let the steam out and let the inside of the appliance become dry.

# MICROWAVE

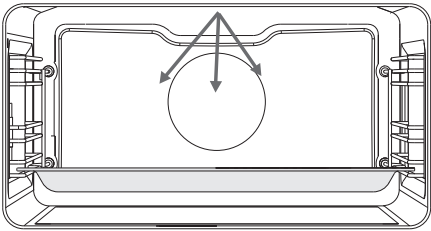

Microwaves are used for cooking and defrosting.

Power levels: 90, 180, 360, 600, 750, 100 W.

Place the glass baking dish into the 1st guide.

## Defrosting

Type of food	Weight (g)	Power (W)	Defrosting time (min)
<b>MEAT</b>			
Minced meat **	500	90	35-45
Meat in pieces **	500	90	20-30
Steaks **	500	90	20-30
Whole pieces of meat **	1000	90	70-80
Poultry portions **	500	90	25-35
Whole fish **	200	90	15-20
<b>PASTRY</b>			
Bread **	1000	90	20-25
Bread rolls **	500	90	10-15
Walnut cake **	500	90	15-25
Fruit cake **	500	90	15-25
<b>FRUIT AND VEGETABLE</b>			
Fruit	500	90	15-25
Vegetable	500	90	20-30

\*\* Turn halfway through the cooking process.

Separate individual pieces. After the end of the process, leave the food at room temperature for 10 to 20 minutes to allow the heat to be evenly distributed in the food.

## Reheating

Type of food	Weight (g)	Power (W)	Defrosting time (min)
<b>FOOD</b>			
Steaks	300 g	600	3-5
Whole fish	200 g	600	3-5
Mixed vegetable *	500 g	600	3-5
Side dishes *	500 g	600	3-5
Sauces *	500 g	600	2-4
Soups/stews *	5 dl	750	2-4
Pizza	500 g	600	2-4
Chicken medallions	500 g	600	2-4
Open sandwiches	/	600	2-4
Popcorn	90 g	1000	2-4
Melting chocolate	100 g	600	2-4
Butter softening	250 g	180	2-4
Baby bottle	2 dl	360	3-4
Baby food	4 dl	180	2-3
<b>BEVERAGE</b>			
Water	2 dl	1000	1-2
Coffee	2 dl	1000	1-2
Mulled wine	2 dl	1000	1-2
Milk	2 dl	1000	1-2

\* Stir the food several times during reheating.

## Cooking

When cooking meat and vegetables, we recommend using a glass dish with a lid. Place the glass dish onto the glass baking tray in the 1st shelf position.

Type of food	Weight (g)	Power (W)	Cooking time (min)
<b>MEAT</b>			
Chicken thighs **	1000	600	20-30
Chicken wings **	1000	600	15-25
Chicken braised in sauce *	500	1000	15-25
Chicken - whole **	1500	600	45-60
Pork roast **	1000	600	45-60
Pork chops **	500	750	25-35
Steaks **	500	1000	10-20
Meat loaf	700	600	25-35
Meatballs *	1000	1000	10-20
Fish **	200	600	15-20
<b>DESSERTS</b>			
Chocolate soufflé	6	360	12-17
Cheese soufflé	glass baking dish	750	15-20
Fruit purée	glass baking dish	750	12-17
Custard creams	glass baking dish	360	23-28

Type of food	Weight (g)	Water addition	Power (W)	Cooking time (min)
<b>VEGETABLE</b>				
Potatoe	500	1 tablespoons/100 g	1000	13-18
Eggplant / aubergines	500	1 tablespoons/100 g	600	13-18
Courgettes	500	1 tablespoons/100 g	360	10-15
Carrots	500	1 tablespoons/100 g	1000	10-15
Onions	200	1 tablespoons/100 g	1000	5-10
String beans	500	1 tablespoons/100 g	750	10-15
Broccoli	1000	1 tablespoons/100 g	750	10-15
Bell peppers	500	1 tablespoons/100 g	1000	8-13
Cauliflower	1000	1 tablespoons/100 g	750	18-23
Leeks	200	1 tablespoons/100 g	1000	10-15

Type of food	Weight (g)	Water addition	Power (W)	Cooking time (min)
Brussels sprout	500	1 tablespoons/100 g	1000	10-15
Button mushrooms / Champignons	500	1 tablespoons/100 g	1000	10-15
Asparagus	500	1 tablespoons/100 g	750	5-10
Peas	500	1 tablespoons/100 g	750	25-30
Cabbage	500	1 tablespoons/100 g	750	15-20

#### SIDE DISHES

Rice	200	Ratio food to liquid 1:2	750	15-20
Pasta	200	Ratio food to liquid 1:2	750	10-15
Whole grain pasta	200	Ratio food to liquid 1:2	1000	10-15
Oatmeal	500	Ratio food to liquid 1:2	1000	5-10
Brown rice	200	Ratio food to liquid 1:2	750	25-30
Risotto	500	Ratio food to liquid 1:2	750	20-25
Couscous	250	Ratio food to liquid 1:2	1000	3-8
Polenta	250	Ratio food to liquid 1:3	1000	5-10
Millet	250	Ratio food to liquid 1:3	1000	10-15


Type of food	Weight (g)	Power (W)	Cooking time (min)
FROZEN PRODUCTS			
Meat loaf	700	600	35-45
Chicken - whole **	1500	600	55-65
Pork roast **	1000	600	50-60
Chicken medallions **	500	750	10-15
Mixed vegetable *	500	750	10-20
Fish **	200	600	10-15

\* Stir the food several times during reheating.

\*\* Turn halfway through the cooking process.



# HOT AIR + MICROWAVE

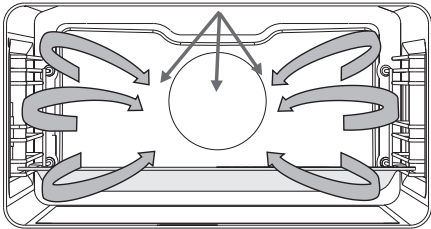


In this cooking mode, the food is cooked with a combination of microwaves and grill.

Power levels: 90, 180, 360, 600 W

- 1 Place the glass baking dish into the 1st guide.

Type of food	Weight (g)	Power (W)	Temperature (°C)	Cooking time (min)
Poultry	1000	360	200-220	35-45
Poultry	Half	360	190-200	25-35
Chicken thighs	1000	600	190-200	20-30
Duck	1500	360	190-200	45-60
Poultry wings	500	600	190-200	15-20

# GRILL + FAN + MICROWAVE

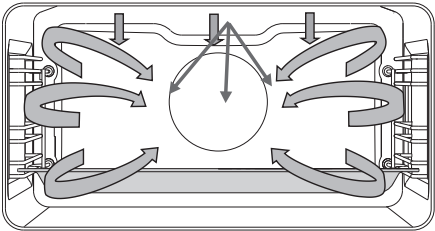

This system uses a combination of microwaves and grill with fan to cut the cooking time.

Power levels: 90, 180, 360, 600 W.

1 Place the baking tray into the 1st guide.

Type of food	Weight (g)	Power (W)	Temperature (°C)	Cooking time (min)
<b>MEAT</b>				
Veal roast	1500	360	180-190	70-90
Lamb ribs	1500	360	180-190	50-60
Meat loaf	1000	360	180-190	40-50
Poultry breast	500	360	180-200	25-35
Duck breast	1000	360	200-210	25-35
Pork roast	1500	600	180-190	60-80
Roasted beef	1500	600	180-190	60-80
Chicken, whole	1500	360	200-210	45-60
Chicken, half	1500	360	200-210	35-45
Chicken thighs	1000	360	200-210	35-45
<b>PASTRY</b>				
Strudel - sweet	/	600	180-200	15-20
<b>VEGETABLE</b>				
Cannelloni	/	600	180-200	15-20
Ukrainian cabbage rolls	/	750	180-200	25-35
Potatoes au gratin	800	600	180-200	25-35



When using microwave systems, do not use metal cookware or utensils.

Do not preheat the oven.

# MAINTENANCE & CLEANING



**Before you start cleaning the appliance, disconnect it from the power mains and let it cool down.**

**Cleaning and maintenance of the appliance should not be performed by children without appropriate supervision!**

## Aluminium surfaces

Aluminium surfaces should be cleaned with non-abrasive liquid detergents intended for such materials.

Apply the detergent on a wet cloth, clean the surface and rinse with water.

Do not apply the cleaner directly on the surface.

Do not use abrasive cleaners or abrasive sponges.

Note: The surface should not come into contact with oven cleaning sprays; this may cause visible and permanent damage.

## Stainless steel front panels

(depending on the model)

Clean the surface with a mild cleaner (soapsuds) and a soft non-abrasive sponge.

To avoid damages to the surface, do not use abrasive or solvent-based cleaners.

## Lacquer-coated and plastic surfaces

(depending on the model)

Never use abrasive cleaners and sponges, alcohol-based cleaners or pure alcohol to clean the knobs, door handles, labels and the rating plate.

Remove the stains immediately using a soft cloth and liquid detergents. You may also use the cleaners made especially for this type of surfaces; in this case, follow the manufacturer's instructions.



The aluminium surfaces should never come into contact with oven cleaning sprays, as these will cause visible and permanent damage.

## Appliance door

The door is attached to the appliance and may not be removed. Also, the door may not be disassembled or otherwise tapered with.

# CONVENTIONAL OVEN CLEANING

You may use the standard cleaning procedure to clean stubborn dirt in the oven (using cleaners or an oven spray). After such cleaning, rinse the cleaner residues thoroughly.

Clean the oven and the accessories after each use to prevent the dirt from burning into the surface. The easiest way to remove grease is by using warm soapsuds while the oven is still warm.

With stubborn dirt and grime, use conventional oven cleaners. Rinse the oven thoroughly with clean water to remove all cleaner residue. Never use aggressive cleaners, abrasive cleaners, abrasive sponges, stain and rust removers etc.


Clean the accessories (baking sheets and trays, grids etc.) with hot water and detergent.

The oven, the oven cavity and the baking trays are lined with a special enamel coating for a smooth and resistant surface. This special coating makes cleaning at room temperature easier.

# STEAM CLEANING PROGRAM (STEAM CLEAN)

Before running the cleaning program, remove all large chunks of dirt and food residues from the oven cavity.

Fill the water tank with water and set the steam cleaning program.

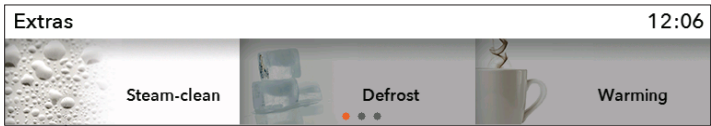


In the main menu, select Extras and **Steam clean**. Confirm your selection by pressing the KNOB.



Press the START key.

When the program is complete, wait for the oven to cool down sufficiently so that you can safely wipe the oven interior.

When the program is complete, the stains on the oven enamel walls will be softened, which allows easier cleaning.  
Wipe the stains with a damp cloth.

 If the cleaning process is not successful (in case of particularly stubborn dirt), repeat it.



Use the cleaning program after the oven has fully cooled down.

# CLEANING THE STEAM SYSTEM

Cleaning depends on the water hardness level.

Water hardness	°N	Estimated use of water in litres before descaling is required	Number of coloured stripes on the test strip
Soft	0-3 dH	50	4 green stripes
Slightly hard	3-7 dH	40	1 red stripe
Medium hard	7-14 dH	35	2 red stripes
Hard	14-21 dH	30	3 red stripes
Very hard	>21 dH	25	4 red stripes

We recommend using the descaling agent as it delivers quality results of the steam system cleaning process.


The following note will appear on the display: **"Please run the descaling procedure."** The notes on the display will guide you through the descaling procedure.

1. Add the descaling agent into the water tank (diluted in water at a ratio of 1:8).
2. Descaling procedure is in progress.
3. Descaling procedure complete. Please remove the liquid, rinse the water tank and add fresh water for the rinsing process.
4. Rinsing process complete. Clean the tank and wipe the oven.  
Also clean the filter foam (see chapter CLEANING THE FILTER FOAM)


# CLEANING THE FILTER FOAM




Any time you clean the water tank or descale the appliance, also clean the filter foam.

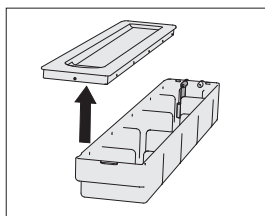


**1** Open the water tank cover.

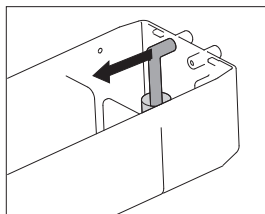


**2** Remove the inlet pipe from the pipe attachment.

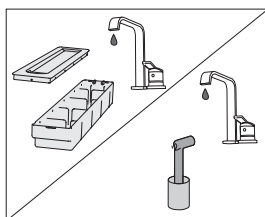


**3** Clean the inlet pipe with the filter foam under running water. Rinse the foam clean so that there are no visible impurities on it. Thus, you will make sure the appliance operates correctly and preserve the fresh flavour and smell of food.

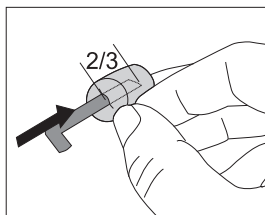


 If the filter foam is detached from the inlet pipe, replace it by inserting the pipe to the depth of two thirds of the overall foam length.

# REMOVING AND CLEANING THE WIRE GUIDES


Only use conventional cleaners to clean the guides.

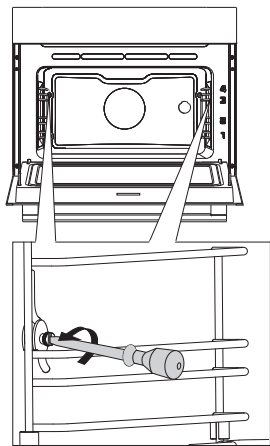

**1** Undo the screw. Use a screwdriver.

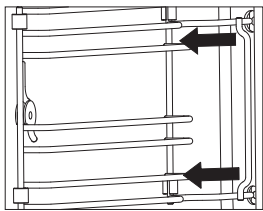

**2** Remove the guides from the holes in the back wall.

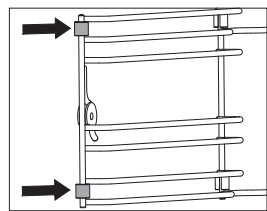

Take care not to lose the spacers fitted on the wire guides. Replace the spacers after cleaning; otherwise, sparks may appear.



**After cleaning, re-tighten the screws on the guides with a screwdriver.**  
**When replacing the wire guides, make sure you mount them on the same side they were installed on prior to removal.**




# REPLACING THE BULB


The bulb is a consumable and therefore not covered by warranty. Before changing the bulb, remove the trays, the grid, and the guides.

Use a Phillips (cross) screwdriver.

(Halogen lamp: G9, 230 V, 25 W)

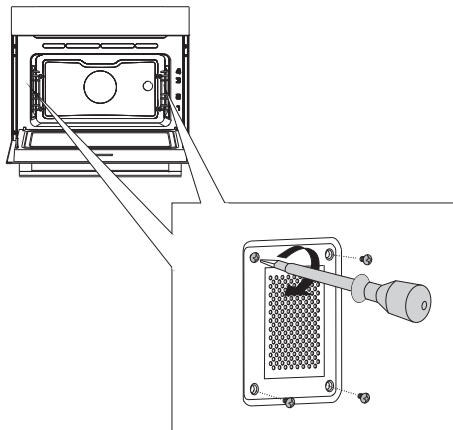


- 1 Undo the four screws on the cover.  
Remove the cover and the glass.

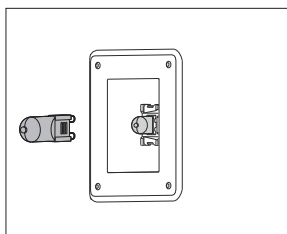

- 2 Remove the halogen light bulb and replace it with a new one.



Use protection to avoid burns.

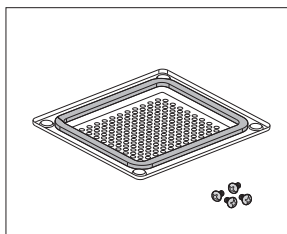

There is a gasket on the cover which should not be removed. Do not allow the gasket to be detached from the cover. The gasket should fit correctly onto the oven cavity wall.



**Firmly re-tighten the screws on the cover using a screwdriver; otherwise, sparks may appear.**

# TROUBLESHOOTING TABLE

Problem/error	Solution
<b>There is no response of the sensors; the display is frozen.</b>	Disconnect the appliance from the power mains for a few minutes (undo the fuse or switch off the main switch); then, reconnect the appliance and switch it on.
<b>The main fuse in your home trips often.</b>	Call a service technician.
<b>The oven lighting does not work.</b>	The process of changing the light bulb is described in the chapter Cleaning and Maintenance.
<b>The pastry is underdone.</b>	Did you choose the right temperature and heating system? Is the oven door closed?
<b>Error code is displayed: ERRXX ... * XX denotes the number/code of the error.</b>	There is an error in the electronic module operation. Disconnect the appliance from the power mains for a few minutes. Then, reconnect it and set the time of day. If the error is still indicated, call a service technician.
<b>Water is not pumped into the steam system.</b>	Check the water level in the water tank. Not enough water in the water tank Make sure the tubes on the back of the water tank and the holes are not clogged.
<b>Sparks appear in the oven.</b>	Make sure all covers of the lights are fastened and that all spacers are fitted on the wire guides. Make sure the guides are correctly placed in the appliance.

If the problems persist despite observing the advice above, call an authorized service technician. Repair or any warranty claim resulting from incorrect connection or use of the appliance shall not be covered by the warranty. In this case, the user will cover the cost of repair.



**Before the repair, disconnect the appliance from the power mains (by removing the fuse or by removing the plug from the wall outlet).**

# DISPOSAL

---



Packaging is made of environmentally friendly materials that can be recycled, disposed of, or destroyed without any hazard to the environment. To this end, packaging materials are labelled appropriately.

The symbol on the product or its packaging indicates that the product should not be treated as normal household waste. The product should be taken to an authorized collection center for waste electric and electronic equipment processing.

Correct disposal of the product will help prevent any negative effects on the environment and health of people which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product.

*We reserve the right to any changes and errors in the instructions for use.*

